



Solos Smartglasses User Manual

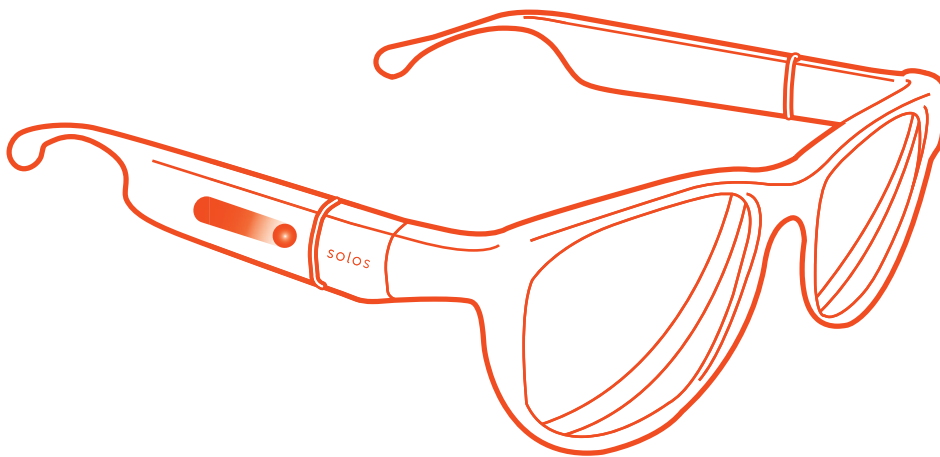


Solos AirGo™ 3
Smartglasses

🔌 Power On / Off

- Before power on, please confirm that the left and right temples are attached to the AirGo3 glasses frame front.
- To power on AirGo3, press and hold Virtual Button on the right temple for 2 seconds until Power Status voice prompt is heard, and its LED flashes in blue color. ✨
AirGo3 will reconnect to last paired phone automatically.

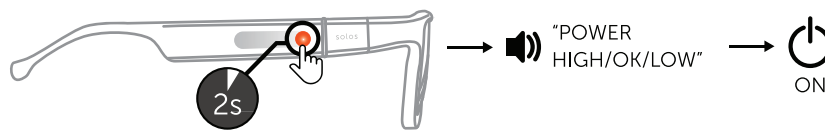


- To power off AirGo3, press and hold Virtual Button on the right temple for 5 seconds until a rapid "Beep" sound and "Power Off" voice prompt is heard, then its LED will turn off. ✨

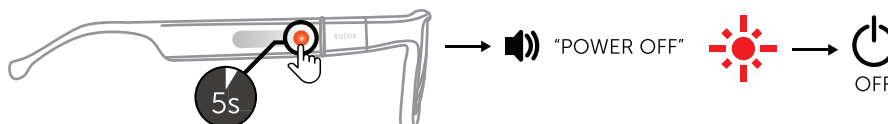


✧ Bluetooth Pairing

- Press and hold Virtual Button on the right temple for 5 seconds to power on AirGo3 until its LED flashes in red/blue color and "Pairing" voice prompt is heard. ✧
- Turn on Bluetooth connectivity of your phone and put AirGo3 right next to your Phone.
- Open Bluetooth settings on your phone and select "Solos AirGo3 xxxx". ("xxxx" is the unique device number)
- AirGo3's LED will flash in blue color ✧ only after it is paired to your phone. It is ready for call and music now.

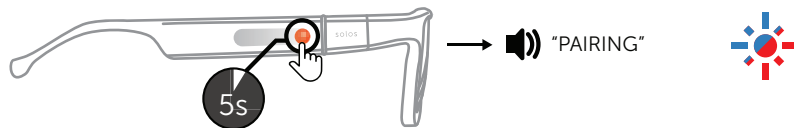


✧✧ Clear Pairing List

Press and hold Virtual Button on the right temple for 8 seconds to power on AirGo3 until its LED flashes in red/blue color, "Pairing" voice prompt and final double-beep sound is heard to clear all host device pairing list inside AirGo3.

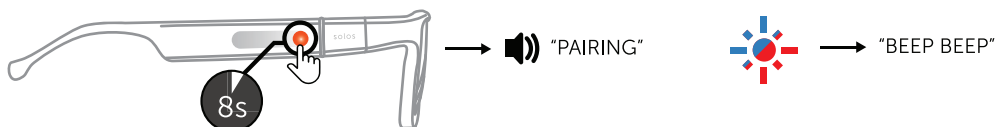


 **Operation Summary**

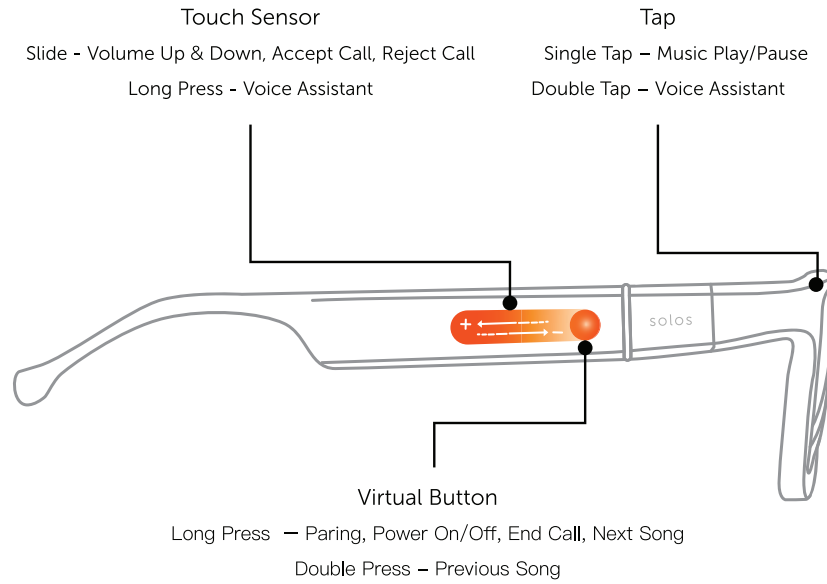


🎵 Music Control

- To play music, ▶ single tap on the frame.
- To pause music, || single tap on the frame.
- When playing music, press and hold the Virtual Button on the right temple for 1 second to play next track. ▶
- When playing music, double press the Virtual Button on the right temple to play previous track. ◀

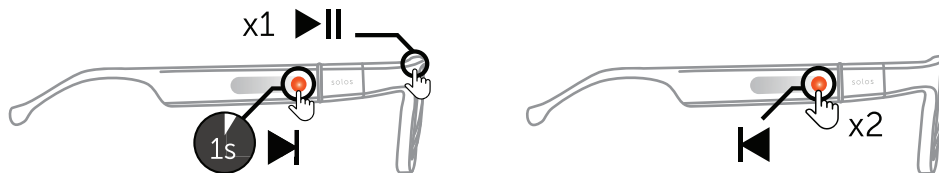


☎ Phone Call

- Slide on the Touch Sensor towards the ears, or press and hold Virtual Button on the right temple to accept a phone call. ☎
- Slide on the Touch Sensor away from ears on right temple to decline a phone call. ❌
- To end a phone call, ☎ press and hold Virtual Button on the right temple for 1 second.
- To accept the 2nd incoming phone call ☎ , press and hold Virtual Button on the right temple for 1 second.

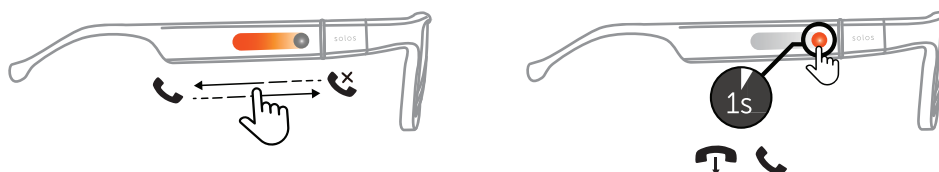


🔊 Volume Control

- To increase volume level, 🔊 slide on the Touch Sensor towards the ears on right temple. 🖱️
- To decrease volume level, 🔊 slide on the Touch Sensor away from ears on right temple. 🖱️

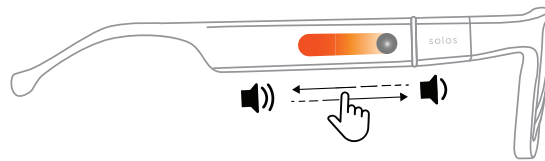





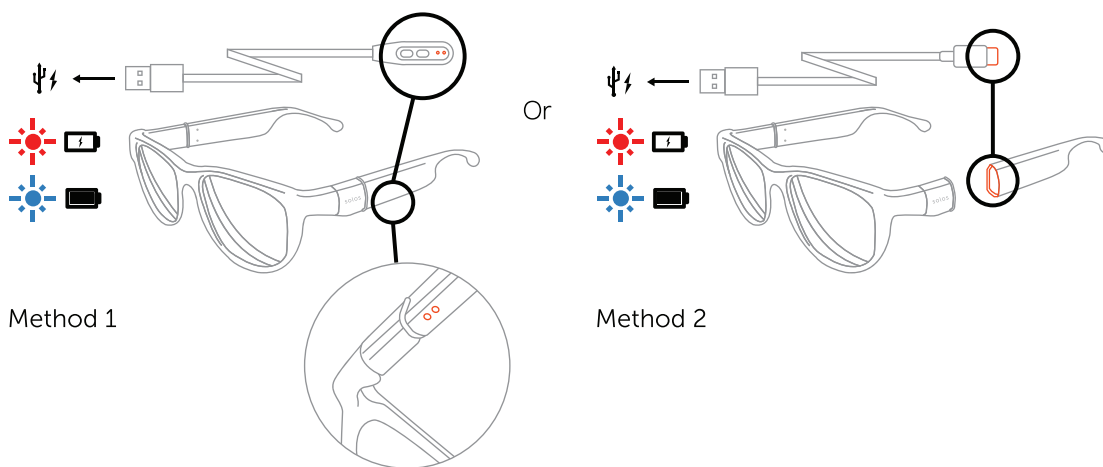
🗣️ Voice Assistant

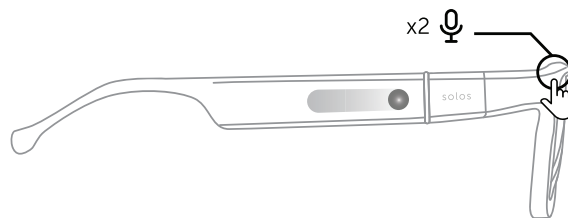- Double tap on the frame to call voice assistant of your phone (iOS or Android). 🗣️



Charging

- Method 1: Connect pogo pin connectors of the dedicated charging cable to AirGo3's left temple charging dock.
- Method 2: Connect Type C charging cable to AirGo3's left temple charging port.
- Plug USB connector  of the charging cable to USB charger  or laptop.
- AirGo3's LED shows in red color  during charging and blue color  after fully charged. AirGo3 will automatically power off when it is under charging.



Mobile App

- AirGo mobile app uses AirGo smart glasses to provide AI Care, AI Coach and many other features.
- AI Care takes care of your health with providing wellbeing features such as posture monitoring, posture/stretching exercise, personal reminders (drink water), etc.
- AI Coach calculates and coaches your jogging activities.
- AirGo mobile app is available for both iOS and Android.












SCAN FOR AI-GUIDED SETUP

of your solos® AirGo™ 3



 LED Lighting Mode

	OFF	Power off / AirGo is put on
	Blue color flashing in every 2s	Waiting for Bluetooth connection to a phone 
	Blue color flashing in every 1s	Bluetooth connected to a phone 
	Red/Blue color flashing	Pairing
	Red/Blue color flashing fast	Receive incoming phone call
	Red color	Press Virtual Button
	Red color flashing fast	3s before power off